

Command:AHOME (AH)

MS2000 or RM2000 syntax

Shortcut	AH
Format	AH [X=x0] [Y=y0]
Units	millimeters
Required Firmware Module	ARRAY
Remembered	Using SS Z

Tiger syntax

Shortcut	AH
Format	[addr#]AH [X=x0] [Y=y0]
Units	millimeters
Type	Card-Addressed
Required Firmware Module	ARRAY
Remembered	Using [addr#]SS Z

Set the location of the first array position when using the [array module](#).

Without arguments, the command reads the current location and sets it to the first array position. Using arguments x0 and y0 are coordinates expressed in millimeters.

[commands](#), [tiger](#), [ms2000](#), [array](#)

From:

<https://docs.asiimaging.com/> - **Applied Scientific Instrumentation**

Permanent link:

<https://docs.asiimaging.com/commands/ahome?rev=1666398972>

Last update: **2022/10/21 20:36**

