

Command:SAR

MS2000 or RM2000 syntax

Shortcut	SAR
Format	SAR [axis] = [rise_time] ...
Units	Milliseconds
Remembered	Using SS Z
Firmware Required	9.56
Firmware Module	SINGLEAXIS_FUNCTION

Tiger syntax

Shortcut	SAR
Format	SAR [axis] = [rise_time] ...
Units	Milliseconds
Type	Axis-Specific
Remembered	Using [addr#]SS Z
Firmware Required	3.60
Firmware Module	SINGLEAXIS_FUNCTION

This command sets the single axis rise time in milliseconds.

The rise time is only used in the variable triangle waveform, see [SAP](#).

The single axis rise time sets the peak location of the variable triangle waveform.

The single axis rise time has minimum value of 1 and maximum value of the single axis period - 1 ([SAF](#)).

[commands](#), [tiger](#), [ms2000](#), [singleaxis](#)

From:

<https://docs.asiimaging.com/> - **Applied Scientific Instrumentation**

Permanent link:

<https://docs.asiimaging.com/commands/sar>

Last update: **2026/05/31 16:59**

